

Wi-Fi Connection

Follow the instructions below at Step 3 of the Quick Start Guide if you want to connect your phone using Wi-Fi instead of Ethernet.

Connect your phone to a power source. Once it powers up, the phone will prompt you to connect to a Wi-Fi network. Follow the on-screen instructions.

If you do not see a prompt, follow these instructions:

- Press the **Menu** softkey (menu icon) and navigate to **Settings**, then **Wi-Fi Settings**
- Set Wi-Fi to **Enabled** if it's not already enabled and save your settings
- Select **Wi-Fi Networks** to scan for available Wi-Fi networks
- Select your Wi-Fi network name from the list, then press the **Connect** softkey (link icon)
- Use the keypad to enter the Wi-Fi password and press the **OK** softkey (checkmark icon)

For detailed instructions, including help with entering your password via the keypad, please visit: support.ooma.com/office/ooma-phone-wi-fi

Once you see your extension name displayed on the screen, your phone is ready to make and receive calls!

