Ooma 2624W

Wi-Fi Connection

Follow the instructions below to connect your phone using Wi-Fi.

Connect your phone to a power source. Once it powers up, the phone will prompt you to connect to a Wi-Fi network. Follow the on-screen instructions.

If you do not see a prompt, follow these instructions:

- Press the Menu button and navigate to System, then Wi-Fi Settings
- Set Wi-Fi to Enabled if it's not already enabled and save your settings
- Use the Scan option to scan for available Wi-Fi networks
- Select your Wi-Fi network name from the list
- Use the keypad to enter the Wi-Fi password and press the **Connect** softkey

For detailed instructions, including help with entering your password via the keypad, please visit: support.com/office/ooma-phone-wi-fi

Once you see your extension name displayed on the screen, your phone is ready to make and receive calls!

System Configurati	ons
Network	>
Wi-Fi Settings	>
Web Access	>
Bluetooth	>
Upgrade	>
Ð	Select
Wi-Fi	
Available Networks	
Password	
SBand A	
SPBMaroc 🔒	
Dismiss OK 1Bc	