



IMPORTANT! Read before assembling the AirDial.

AirDial ships with two separate types of antennas, which must be installed in the appropriate ports.

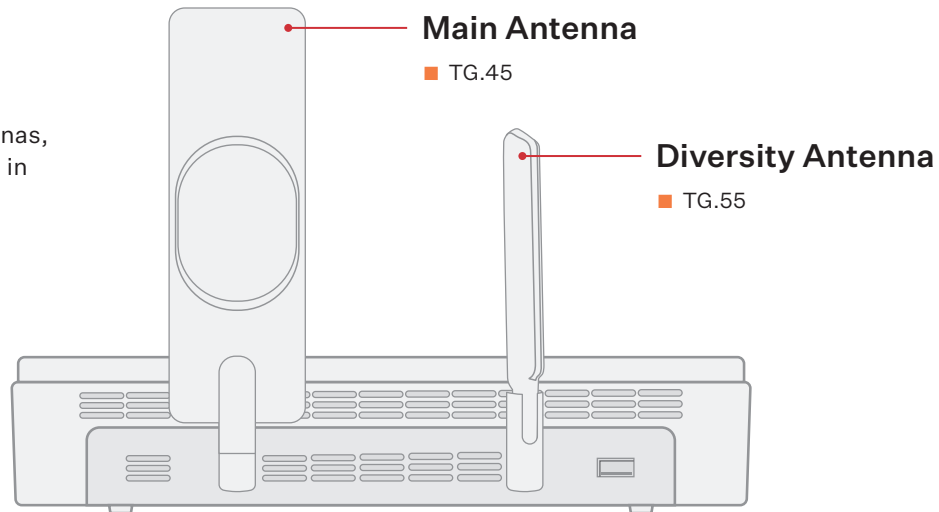

The main antenna **A** TG.45 is on the same side as the battery compartment door that houses the battery and the SIM cards **B**

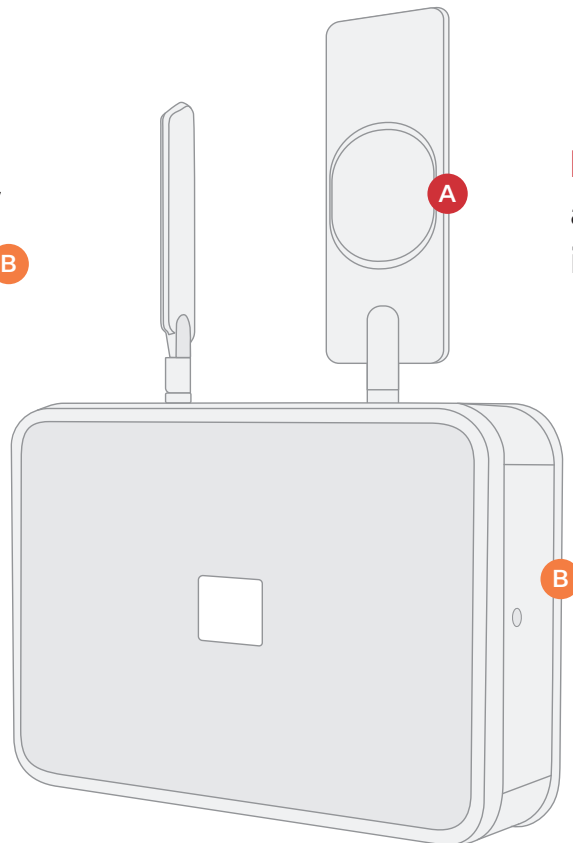

Note: Antennas must always stand upright in a vertical position.